

HotelTV

HTVBootcaster Manual

REV A0.2

2014 July

Web : <http://support.vestek.com.tr>
Mail : support@vestek.com.tr
Tel : +90 212 286 01 06

Vestek Elektronik Ar-Ge A.Ş.
İTÜ Ayazağa Kampüsü Koru Yolu
Arı 2-B Blok Maslak/İstanbul

1. Revision History

Date	Owner	Version	Reason & Change
08 July 2014	Görkem Giray	A0.1	Initial creation
08 October 2014	Jale Demir	A0.2	Revision

2. Table of Contents

1. Revision History	2
2. Table of Contents	2
3. Table of Figures	2
4. Usage.....	3


3. Table of Figures

<i>Figure 1: Example execution of HTVBootcaster</i>	3
-----------------------------------------------------------	---

4. Usage

Browse the directory `C:\VestekSupport\HTVBootcaster\` by using command line where your HTVBootcaster files lie in. The configuration file which involves data to be sent to TVs in is `htvbootcaster.conf` and you can modify it by a text editor according to your own system. Then, enter the command indicated below on command line according to your own server settings. An example scenario is indicated in Figure 1. Example run command is "`HTVBootcaster 239.254.0.241 22222 1 bootcaster.conf 5`"

```
Usage: HTVBootcaster <multicastIP> <port> <interval-secs> <input file>
<TTL>
```

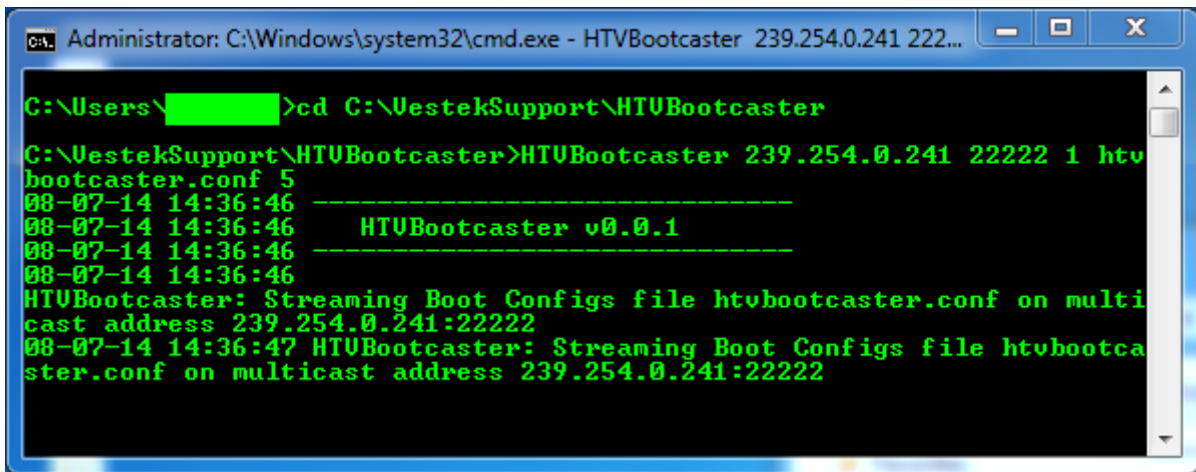

```
Administrator: C:\Windows\system32\cmd.exe - HTVBootcaster 239.254.0.241 222...
C:\Users\...>cd C:\VestekSupport\HTVBootcaster
C:\VestekSupport\HTVBootcaster>HTVBootcaster 239.254.0.241 22222 1 htv
bootcaster.conf 5
08-07-14 14:36:46 -----
08-07-14 14:36:46 HTVBootcaster v0.0.1
08-07-14 14:36:46 -----
08-07-14 14:36:46
HTVBootcaster: Streaming Boot Configs file htvbootcaster.conf on multi
cast address 239.254.0.241:22222
08-07-14 14:36:47 HTVBootcaster: Streaming Boot Configs file htvbootca
ster.conf on multicast address 239.254.0.241:22222
```

Figure 1: Example execution of HTVBootcaster